

# BLADE™ PRINTER OPTIONS

Print features available for the *BLADE™* wood processing system.

## Overview of Printer Options

- A** Standard printer included with every saw, uses 1 print head to print standard print fields (text) on front face.
- B** Uses two print heads to print standard print fields, joint and plate information, and joint alignment marks on face-up (on assembly tables) side of board.
- C** Same as A, plus a 2nd print head to print on top edge of board.
- D** Same as B, plus a 3rd print head to print on edge of board.
- E** *AGS+* Same as B, plus plate outlines and basic graphics on face-up side.  
BEST ROI FOR TRUSSES!
- F** *AGS+* Same as E, plus a 3rd print head to print on edge of board.  
BEST ROI FOR WALLS!

## Compare and Contrast Printer Options

	Front	Rear	Edge	Front	Rear	Edge	Face-Up Side					Front	Rear	Edge
	# of Valves			Standard Print Fields <sup>^</sup>			Joint #	Alignment Marks <sup>*</sup>	Plate Size	Plate Outline	Graphic	Wall Marks		
<b>A</b>	16	0	0	X										
<b>B</b>	16	7	0	X	X		X	X	X					
<b>C</b>	16	0	7	X		X						X		X
<b>D</b>	16	7	7	X	X	X	X	X	X			X		X
<b>E (AGS+)</b>	32	32	0	X	X		X	X	X	X	X			
<b>F (AGS+)</b>	32	32	7	X	X	X	X	X	X	X	X	X		X

<sup>^</sup> Default Standard Print Fields are truss name, quantity, and description, but many other text fields can be chosen from.

<sup>\*</sup> Joint Alignment Marks can be moved toward the top or bottom edge of the boards so they are closer to the joint.